IMPORTANT INSTALLATION NOTES:

- FIXTURE TO BE INSTALLED IN ACCORDANCE WITH ALL APPLICABLE CODES BY A QUALIFIED ELECTRICIAN OR OTHER PERSON FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THIS PRODUCT AND THE HAZARDS INVOLVED.
- INSURE WALL HANGING RAIL IS LEVEL
 FIXTURES MUST BE HUNG PRIOR TO INSTALLATION OF CEILING
- FIXTURES FABRICATED TO SIZE ACCORDING TO SUPPLIED DIMENSIONS AND ARE NOT ADJUSTABLE.
- HANG INDIVIDUAL OR START FIXTURE SECTIONS FIRST. TAKE CARE TO LEVEL THE FIXTURE AT THIS POINT, ESPECIALLY FOR CONTINUOUS RUNS.


 FOR CONTINUOUS RUNS, HANG EACH SUCCESSIVE SECTION USING THE JOINING AND ALIGNING HARDWARE PROVIDED WITH THE FIXTURES, AND LEVEL EACH SECTION WITH THE PREVIOUS ONE.


- WHEN INSTALLING PATTERNS START WITH CORNERS AND WORK OUTWARDS

 ****DO NOT ATTEMPT TO BOLT FIXTURES TOGETHER AND RAISE THE ASSEMBLED RUN AT ONE TIME. THIS WILL DAMAGE THE

 BRACKETRY AND PREVENT THE FIXTURES FROM JOINING TIGHTLY, AND WILL VOID THE FIXTURE WARRANTY!***


 FOLLOW THE SAME PROCEDURE ABOVE TO INSTALL THE END UNIT.
- RECHECK ALL FIXTURES FOR LEVEL AND INSURE ALL JOINTS ARE TIGHT.
- IF SMALL GAPS OCCUR BETWEEN FIXTURE SECTIONS, APPLY A SMALL AMOUNT OF CAULK BETWEEN SECTIONS AND WIPE OFF EXCESS WITH A DAMP CLOTH.

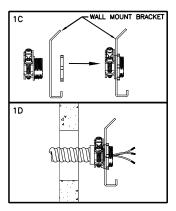

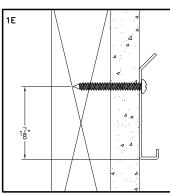


1A-IDENTIFY ELECTRICAL CONNECTION ON FIXTURE (NOT SHOWN)
1B-LOCATE ELCTRICAL FEED POINT PER CUSTOMER DRAWING. (NOT SHOWN)

1C-PREPARE WALL BRACKET: INSTALL MC CABLE
CONNECTOR TO WALL MOUNT BRACKET. 1D-SECURE CONDUIT TO CONNECTOR 1E-INSTALL 'WALL MOUNT BRACKET' AT CUSTOMER SPECIFIED HEIGHT. SEE 'WALL MOUNT FIXTURES' FOR REFERENCE DIMENSIONS. BLOCKING BY OTHERS. ADDITIONAL HOLE(S) FOR MOUNTING BRACKET TO WALL STUDS OR FOR INSTALLING MC CABLE CONNECTOR MAY BE ADDED BY CONTRACTOR.

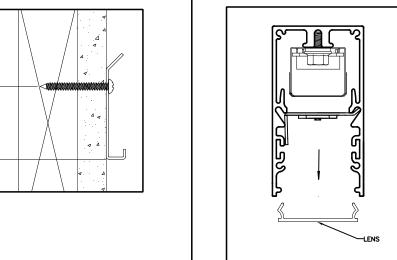


STEP 2: -REMOVE LENS FROM EACH 'STARTER', 'MIDDLE' AND 'END' FIXTURES. -MARK EACH LENS TO CORRESPONDING FIXTURE TO BE REINSTALLED IN STEP 7.

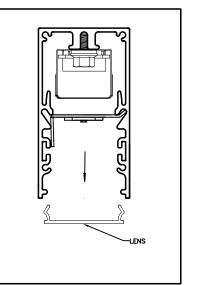


STEP 3: 3A-MAKE ELECTRICAL CONNECTION TO BUILDING SUPPY.

3B-PUSH ALL WIRE CONNECTORS BACK INSIDE THE

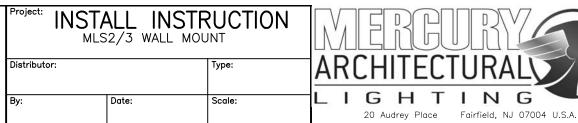



CATALOG NO:

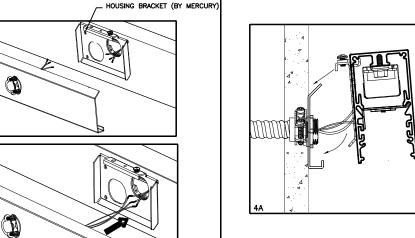

SHEET 1 OF 1

Dwg. no.:

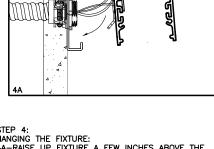


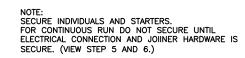


8-32 SCREWS


STEP 4: HANGING THE FIXTURE: 4A-RAISE UP FIXTURE A FEW INCHES ABOVE THE WALL MOUNT BRACKET. PROCEED WITH DOWNWARD ROTATING MOTION, REST FIXTURE ON WALL MOUNT 4B-TIGHTEN 8-32 SCREWS ON HOUSING BRACKET UNTIL FIXTURE IS SECURED.

FOR MIDDLE AND END FIXTURES CONTINUE TO STEP 5 FOR INDIVIDUAL FIXTURES, INSTALLATION IS COMPLETED

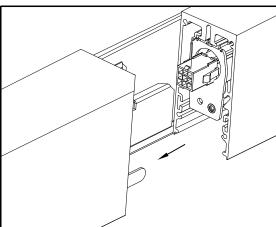


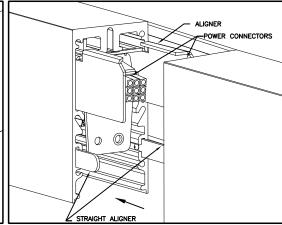


STEP 5: -HANG THE MID/END FIXTURES AS SHOWN IN STEP -ALIGN FIXTURE USING ALIGNERS BY MERCURY -CONNECT POWER CONNECTOR BETWEEN FIXTUES.

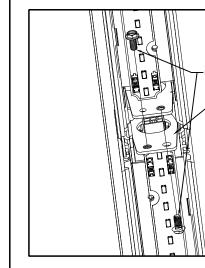

PUSH EXCESS POWER CONNECTOR CABLES
BACK INTO FIXTURE THROUGH JOINERS AS
SHOWN FOR MLS-2 OR TO EITHER SIDE OF -SECURE FIXTURES TOGETHER USING (2) 8-32 SCREWS ON JOINER (PROVIDED BY MERCURY)
-REPEAT STEP 4 & 5 AS NEEDED UNTIL 'END' MODULE IS INSTALLED.

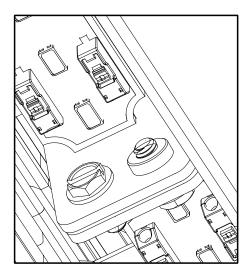

COMPLETE JOINT ASSEMBLY AFTER COMPLETE ASSEMBLY PLEASE REPEAT 4B.

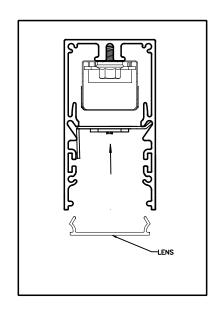

STEP 7 -REINSTALL LENS REMOVED FROM STEP 2

This document contains confidential and proprietary information and cannot not be reproduced or divulged, in whole or part, without authorization in writing by Mercury Architechural Lighting.